




**SP-1346  
INSTALLATION  
INSTRUCTIONS**

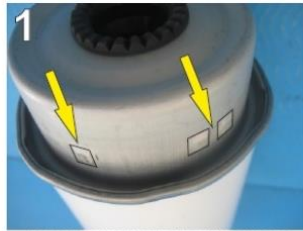

**1**  
LOCATE ON THE FILTER THE SINGLE AND THE DOUBLE NOTCHES



**2**  
LOCATE ON THE MOUNTING BASE THE CUTS FOR THE SINGLE AND THE DOUBLE NOTCHES



**3**  
SINGLE CUT IS UNDER HERE  
LOCATE THE LOCK SYMBOLS ON THE MOUNTING BASE. THE SINGLE CUT IS LOCATED EXACTLY IN THE MIDDLE OF THE 2 LOCK SYMBOLS



**4**  
PLACE THE FILTER WITH THE SINGLE NOTCH TO BE BETWEEN THE 2 LOCK SYMBOLS AND PUSH UP



**5**  
ROTATE THE FILTER CLOCKWISE UNTIL YOU HEAR A "CLICK"